

## Elite Installation Instructions



1. Fireplace opening before the Elite door is installed.




2. Remove the doors from the frame. Align the Elite frame in the opening. In this example we are showing an inside fit application.



3. You may need to bent the provided bracket for install. Measure from the back flange on the frame to the inside of the firebox where the bracket will be installed. In this example we measured 1 3/4". If bracket does not need to be bent skip to # 5.

4. Use a claw hammer to bend the bracket. Then attach the bracket with the provided hardware to the back flange of the frame.

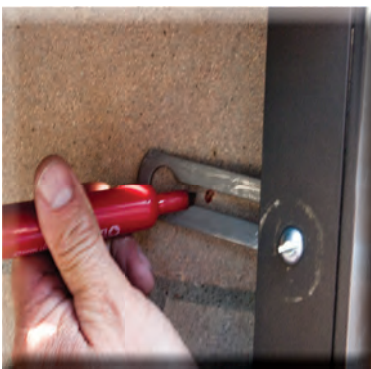

5. Mark the inside of the firebox for the provided bracket to attach the Elite frame to the firebox. In this case we have used a masonry drill bit for the hole and lag shield. Inset the lag shield, then fit the frame back to the firebox and install the lags. Then align the frame in the opening and tighten all the hardware for a final fit.

